

■ 유지관리

- 악기를 닦을 때는 부드럽고 마른 천 또는 살짝 젖은 천을 사용하십시오.
- 도료희석제, 용제, 알코올, 세정액 또는 화학약품 처리된 걸레는 사용하지 마십시오.
- 온도나 습도의 급격한 변화가 생기면 악기 표면에 응결이 발생하거나 물이 고일 수 있습니다.
- 물기가 남아 있으면 목재부가 이 물기를 흡수하여 손상될 수 있으므로 중요한 데이터는 컴퓨터와 같은 외부 장치에 저장하십시오.

※제품이상 증상 및 조치

증상	조치
일부 건반이 작동하지 않아요.	스탠드와 피아노를 고정하는 볼트를 강하게 조이면 피아노 하판 변형으로 작동에 영향을 줍니다. 볼트를 살짝 풀어주세요. 스탠드와 피아노가 잘 접합될 정도만 조여주시면 됩니다.
전원 어댑터를 연결해도 작동하지 않아요.	정전기에 의해 피아노에 전기적 충격이 가해졌을 수 있습니다. 전원 어댑터 연결을 해제 한 후 2-3시간 후에 다시 전원을 켜보세요. 전원 재기동 후에도 작동하지 않는다면 고객센터에 문의 해주세요.
전원이 켜지고 LCD가 정상적으로 표시되지만 아무런 소리가 들리지 않아요.	마지막 사용 때 이어폰이나 헤드폰을 사용했다면, 연결을 해제 해주세요. 해제 후에도 소리가 들리지 않는다면 전원을 끈 후 다시 켜주세요. 볼륨을 확인 후 볼륨도 정상적으로 설정되어 있다면 고객센터에 문의 해주세요.
USB 메모리를 연결하여 음악을 재생해도 음악이 재생하지 않아요.	피아노 전원을 끈 후, USB 메모리를 컴퓨터에 재연결하여 USB 메모리가 정상적으로 인식하는지 확인하세요. USB 메모리가 정상인식하면 저장한 MP3 파일이 손상되지 않았는지 확인 해주세요. MP3 파일이 손상되었다면 재생이 불가능합니다. 불법적인 경로로 다운로드 받은 MP3 파일을 저장했다면 손상되었을 가능성이 높습니다. 올바른 파일을 준비하여 USB 메모리에 다시 저장 한 후 재생 해주세요.
반주, 리듬, 코드 소리가 작아요.	리듬, 코드 볼륨을 확인해주세요. 볼륨이 적게 설정되어 있다면 적정 볼륨으로 높혀 사용 해주세요.
연주 중 울리는 소리가 들려요	피아노와 X형 스탠드 연결 나사를 꼭 조여주세요.

  	경고 3세 미만 사용금지 입에 넣지 마시오. 코에 넣지 마시오.		주의 보호자와 함께 사용하십시오.	 안전확인 신고 확인증 번호 R-R-Tg1-88piano
--	---	---	---------------------------------	--

본 제품은 결함, 하자 발생시 공정거래위원회 소비자 분쟁 해결 기준에 의거 교환 또는 보상을받을 수 있습니다.
 단, 소비자 부주의로 인한 파손이나 손해는 보상이 불가능합니다.

T·Gate

서비스센터 031-356-5428

경기도 화성시 남양읍 화성로1424번길 18 토이게이트

Ludwig

88건반 해머형 루드비히 피아노

※이 제품은 국내용입니다.

※품질 향상을 위하여 제품의 디자인이나 성능이 예고없이 변경될 수 있습니다.

⚠ 주의 사항 ⚠

사용 전에 반드시 “주의사항”을 읽어 주십시오.

- 제품 구성에 포함된 부품 또는 부속품 이외의 것은 사용하지 마십시오.
- 제품을 떨어뜨리거나 제품에 충격을 가하지 마십시오.
- 본 제품은 가정용이므로 업소용으로 사용하거나 다수의 사람이 사용하는 장소에 두지 마십시오.
- 버튼, 스위치, 입/출력 단자 등에 무리하게 힘을 가하지 마십시오.
- 제품과 같이 사용될 수 있는 증폭장치, 스피커, 헤드폰의 사용시 청력을 손상시킬 수 있는 소리를 발생시킬 수 있습니다. 너무 큰 소리를 발생시키는 상태나 피로를 느끼는 상태의 크기로 장시간 동작시키지 마십시오.
- 연주를 시작하기 전에 제품의 음량이 최소로 설정되어 있는지 확인하고 연주 중 단계적으로 음량을 올려 원하는 음량 수준으로 맞추십시오.
- 제품 사용 시 어댑터는 단독으로 사용하시고, 반드시 상품 구성에 포함된 전용 어댑터만 사용하십시오.
- 어댑터는 콘센트 끝까지 밀착하여 꽂으십시오.
- 어댑터에 먼지·이물질이 묻었을 경우 즉시 닦아주십시오.
- 전선을 상하게 하거나 무리한 구부림, 잡아당기거나, 비틀거나, 묶거나, 고온에 가까이 하거나, 무거운 물건을 올려놓거나, 가공하지 마십시오.
- 어댑터를 뽑을 때는 선을 잡지 말고 반드시 어댑터 본체를 잡고 뽑으십시오.
- 제품을 사용하지 않을 때는 항상 전원을 끄십시오.
- 제품을 장시간 사용하지 않을 경우 반드시 전원 어댑터를 뽑아주십시오.
- 본체를 옮길 경우에는 케이블이 손상되거나 다른 사람이 발에 걸려 넘어져 다치지 않도록 연결된 모든 케이블을 분리한 후 이동하십시오.
- 불안정한 장소에 본 제품을 설치하지 마십시오. 본체가 떨어져서 고장이 나거나 사용자 혹은 다른사람이 다칠 수 있습니다.
- 화재 방지를 위해 난방기구 주변에서 사용하지 마십시오.
- 양초 등 연소성 물체를 본체 위에 놓지 마십시오. 연소성 물품이 떨어져 화재를 일으킬 수 있습니다.
- 가연성, 인화성 물질(알코올, 에탄올, 시너, 벤젠, 약품, LP가스, 살충제, 방향제 등) 근처에서 사용하지 마십시오.
- 비에 젖지 않도록 하고, 물 또는 습기가 많은 장소에서 사용하거나 쏟아질 우려가 있는 액체가 담긴 용기(화병, 물컵 등)을 본 제품에 올려 놓거나 주변에 놓지 마십시오.
- 절대로 젖은 손으로 제품을 만지거나 어댑터를 연결하지 마십시오.
- WiFi 및 블루투스는 지원되지 않습니다.
- 제품에 절대 물을 뿌리거나, 물에 넣어 세척하지 마십시오. 제품 내부에 물이나 이물질이 들어간 경우 즉시 제품의 전원을 끄시고 전원플러그를 뽑은 후 A/S센터로 연락하십시오.

FINGER CHORD List

	mM7	7-5	add9
C			
C# Db			
D			
D# Eb			
E			
F			
F# Gb			
G			
G# Ab			
A			
A# Bb			
B			

FINGER CHORD List

	aug	sus4	7sus4	m add9
C				
C# Db				
D				
D# Eb				
E				
F				
F# Gb				
G				
G# Ab				
A				
A# Bb				
B				

⚠ 주의사항

- 제품 분해, 수리, 개조는 절대로 하지 마십시오.
- 움직이는 부위에 손이 끼지 않게 조심하십시오.
- 제품에 올라가거나 무거운 물체를 올려놓지 마십시오.
- 37개월 이하의 어린이는 작은 부속품을 삼킬 수 있으니 부모님의 주의해주십시오.
- 본 제품은 220V 전용 제품입니다. 110V 사용을 금하여 주십시오.
- 기본 포함 어댑터는 소모품으로 A/S가 불가능합니다.

제품의 특징점


- 높은 수준의 전문가용 멀티 코어칩 내장
- 424-Beat DPS 내장된 DREAM SAM5504 칩 사용
- 다양한 힘 조절이 가능한 해머와 스프링 타입의 88키
- 900가지 악기, 700가지 리듬, 110가지 데모송
- 세계적인 다양한 뮤직스타일이 포함된 정교한 멀티트랙 리듬
- 3자리 디스플레이
- 신디사이저
- 연주 녹음/재생 가능
- 키보드 분할 기능
- 메트로놈 기능
- TEMPO 속도 조절 기능
- MP3 플레이 가능

88건반 해머형 루드비히 피아노


- | | |
|-----------------------------------|--------------------------|
| · 품명: 악기 | · 모델명: 88건반 해머형 루드비히 피아노 |
| · 제조년월: 2021년 6월 | · 제조자명: JINJIANG SHENGLE |
| · 수입자명: 토이게이트 | · 제조국명: 중국 |
| · TEL: (031)356-5428 | · 사용연령: 14세 이상 |
| · 동봉 어댑터 전력 : IN PUT : 220V, 60Hz | |
| OUT PUT : 12V 2.2A | |

제품의 구성품


• 본체

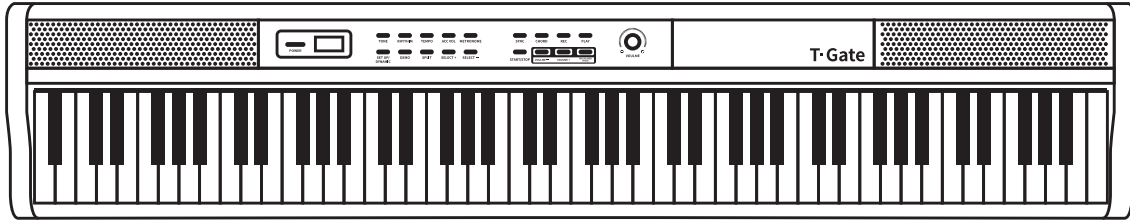

• X형 스탠드

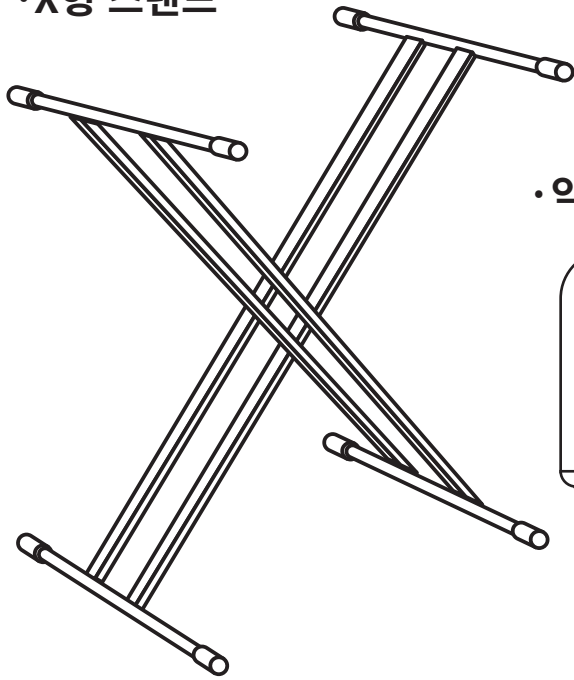

• 악보대




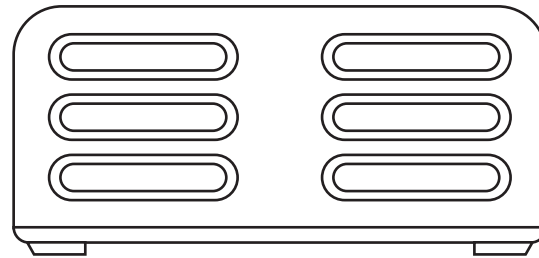


• 서스펜션 페달

• 전원 어댑터

• USB 미디 케이블

• 사용 설명서

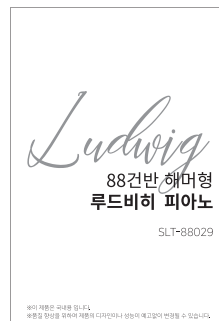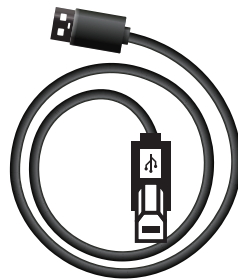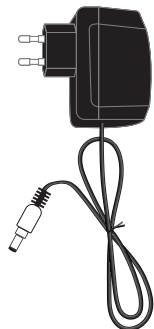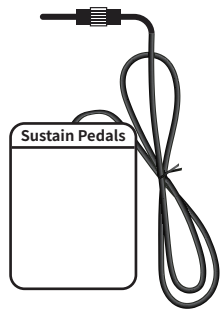

※본체 건전지 사용 불가

FINGER CHORD List


	dim7	M7	m7-5	dim
C				
C# Db				
D				
D# Eb				
E				
F				
F# Gb				
G				
G# Ab				
A	/			
A# Bb				
B				

FINGER CHORD List

	M	m	7	m7
C				
C# Db				
D				
D# Eb				
E				
F				
F# Gb				
G				
G# Ab				
A				
A# Bb				
B				


본체의 버튼 명칭

· 전면부 패널

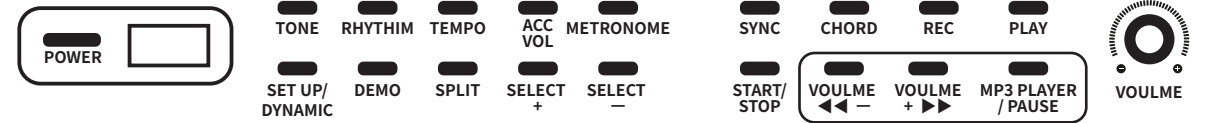

- | | | | |
|-----------------|----------------|--------------------|-------------------|
| POWER | : 전원 ON/OFF | SYNC | : 자동반주기능 |
| TONE | : 음색을 선택 | CHORD | : 화음 변경 |
| RHYTHM | : 리듬을 선택 | REC | : 연주한 음악을 녹음 |
| TEMPO | : 템포 조절 | PLAY | : 녹음된 음악을 재생 |
| ACC VOL | : 리듬 볼륨 조절 | START/STOP | : 리듬 연주를 시작/정지 |
| METRONOME | : 박자 조절 | ◀◀ VOULME - | : MP3 볼륨 DOWN/이전곡 |
| SET UP/ DYNAMIC | : 조율/건반의 강약 조절 | ▶▶ VOULME + | : MP3 볼륨 UP/다음곡 |
| DEMO | : 데모송 연주 | MP3 PLAYER / PAUSE | : MP3 음악 재생/정지 |
| SPLIT | : 분할 연주 | VOULME | : 모든 음량 크기를 조절 |
| SELECT + | : UP | | |
| SELECT - | : DOWN | | |

· 후면 제어부

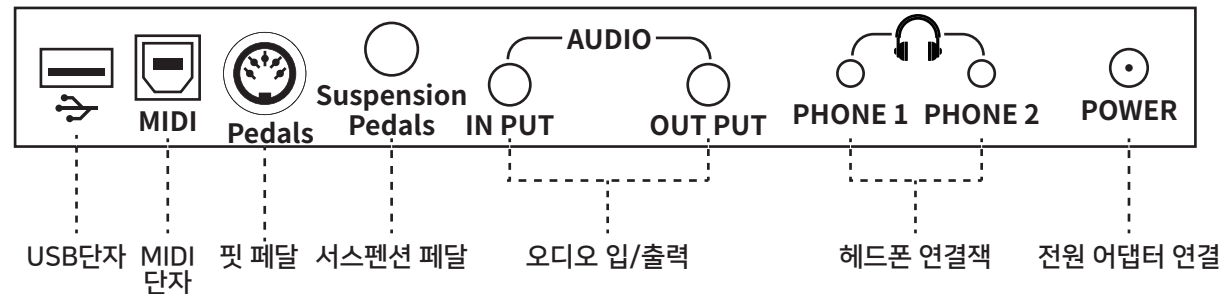

- 전원 연결 - 전원 어댑터를 연결합니다.
- 헤드폰 연결 - 150mW 2개의 헤드폰 연결잭이 있습니다.
헤드폰이 연결되어 있으면 스피커에서 소리가 나지 않습니다.
- 오디오 입력 - 오디오 케이블을 "Audio input" 잭에 꼽아서 핸드폰과 연결하여 피아노와 동시에 음악을 재생할 수 있습니다.
- 오디오 출력 - 오디오 케이블을 이용하여 다른 오디오 장비와 연결할 수 있습니다.
- SUSTAIN PEDAL SOCKET - Sustain pedal을 연결합니다.
- PEDAL SOCKET - Feet pedal 을연결합니다.
- MIDI SOCKET - USB 케이블을 이용하여 컴퓨터, 노트북에 연결하고 MIDI 데이터를 주고받을 수 있습니다.

사용 전 준비 및 사용방법

1. 박스에서 구성품 확인

- 박스를 개봉 후 구성품을 확인해 주십시오.
- 본체, 스탠드, 악보대, 전원 어댑터, 서스펜션 페달, USB 미디 케이블, 사용설명서
- 개봉 후에도 박스는 보관 및 A/S를 위해 보관하시는 것을 권장드립니다.

2. 평평한 곳에 X형 스탠드 설치

- 넘어질 위험이 없는 평평한 안전한 곳에 X형 스탠드를 설치 후 위에 피아노를 설치하세요.

3. 전원 연결 및 전원 켜기

- 제품에 동봉된 어댑터를 콘센트와 피아노 후면 어댑터 잭에 연결해주세요.
- [POWER] 버튼을 누르면 LCD 창에 '001'이 표시되며 정상작동 된것입니다.

패널 버튼 기능 설명

TONE(음색 설정)

- [TONE] 버튼을 누르고 [SELECT +, -]으로 음색 선택
- 총 900가지 음색 선택가능(8~13P 참고)

RHYTHM(반주)

- [RHYTHM] 버튼을 누르고 [SELECT +, -]으로 리듬 선택 [START/STOP]을 눌러 반주 시작
- 총 700가지 리듬 선택가능 (14~16P 참고)

TEMPO(속도 조절)

- [TEMPO] 버튼을 누르고 [SELECT +, -]으로 속도 조절
- 총 270단계의 템포 조절(30~300)
- 데모송이 연주될 때에는 기록된 템포로 연주됩니다.
- 리듬이 연주 될 때에는 설정된 템포로 연주됩니다.

ACC VOL(리듬/반주 볼륨 조절)

- [ACC VOL] 버튼을 누르고 [SELECT +, -]으로 리듬 볼륨조절
- 총 0~16조절

METRNome(박자)

- [METRONOME] 버튼을 짧게 눌러 ON/OFF, [METRONOME] 버튼을 길게 눌러 박자조절
- 박자선택 중 [SELECT +, -]으로 1/4, 2/4, 3/4, 4/4 선택
- 녹음 중에는 [METRONOME] 버튼을 눌러서 메트로놈 소리를 ON/OFF

SINGLE CHORD List

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

DEMO List

001 Hotel Pacific	038 Greensleeves	075 On affordable
002 1900's Madness	039 Polka	076 You set off to the chapeau
003 Family Restaurant	040 Arabesque	077 The Qinghai-Tibet Plateau
004 To Flush Waves Johnny	041 Sighing	078 Same Song
005 Zimbada hand	042 Restlessness	079 Hill Road Bending 18
006 Paradise	043 La Donna E Mobile	080 Farewell
007 Birthday	044 Fur Elise	081 Happy home
008 Carmen	045 Chanson Du Toreador	082 Place peach bloom
009 Cavatina	046 Hungarin Dances No.5	083 New Century
010 Jingle Bells	047 Nocture	084 Gave me a Red Rose
011 Silent Night	048 Red River Valley	085 Kangding Love Song
012 O Christmas Santa Claus	049 Danny Boy	086 Dansolde
013 When The Saints Go Marchin In	050 Picnic	087 Beijing Tune
014 Oh Susanna	051 My Bonnie	088 Yi Jian Mei
015 Moon River	052 Home On The Range	089 Rumanxilou
016 ABC Word	053 She Wore A Yellow Ribbon	090 Goodbye Dabieshan
017 We Wish You A Merry Christmas	054 Cow Boy	091 Happy Chinese New Year
018 Six Little Ducks	055 Twinkle Twinkle Little Star	092 Dreams Of Riverboat
019 Mary Had A Little Lamb	056 Jockey Club	093 The Penghu bending Grandmother
020 Moonlight Bay	057 Yang On A Horse To Transport Grain	094 Heart-Throb
021 American Beauty Rag	058 Steping Higher And Higher	095 Wish You Peaceful
022 Crazy Arms	059 US Taihu Lake	096 Impulse punishment
023 Before the Next TearDrop Falls	060 Osmanthus everywhere open in August	097 Shepherd Front
024 Waltz Op64 No.1 By Chopin	061 Central government	098 Spring Festival Overture
025 Piano Sonata	062 Tathagata	099 One can hope that long
026 The Beautiful Blue Danube	063 Aobaoshan	100 The bending moon
027 The Crave	064 Yangming Chunxiao	101 Sweet Honey
028 Tea for Two	065 Jasmine	102 Liang Zhu
029 Sleigh Ride	066 Jaunty	103 Platforms
030 Rudolph The Red Nosed Reindeer	067 Good Day	104 Welcome march
031 Santa Claus Is Coming To Town	068 Childhood	105 mei fei se wu
032 Traumerei	069 Zi ZhuTiao	106 Efforts will win
033 Clock	070 Auspicious TREBLE	107 Dance Song
034 Humoresque	071 Trials of a long journey always intelligence	108 Xinjiang Dance
035 Frohlicher Landmann	072 In that faraway place	109 The sunset Drunk
036 Canon	073 Prairie Song	110 Prairie paeen
037 Waltz	074 Look at home	

SET UP/ DYNAMIC(설정/해머건반)

- [SET UP/DYNAMIC] 버튼을 길게 눌러 건반의 강약을 조절할 수 있습니다.
[SET UP/DYNAMIC] 버튼을 길게 누르고 [SELECT +, -] 버튼을 눌러 1(약), 2(중간), 3(강), OFF를 선택합니다. 기본적으로 2(중간)상태로 설정되어 있습니다.
- [SET / DYNAMIC] 짧게 누르면 설정 모드입니다.
설정 모드를 선택할 수 있으며 [SELECT +, -] 버튼을 눌러 숫자 변경 또는 켜거나 끕니다.


누른 횟수	모드 이름	디스플레이 표시	변경 범위	기본 상태
1	Dual	dUL	ON/OFF	OFF
2	Tune	tUn	-99~100	00
3	Transposition	trS	-12~12	00
4	Dual vol	d-U	000-100	50
5	Left vol	L-U	000-100	80
6	SP. Point	S-P	01-88	44
7	CD. Point	C-P	01-88	34
8	Minus	inS	OFF/r/L/rL	OFF

· **OFF**: 모든 멜로디를 재생 · **L**: 메인 멜로디만 연주 · **r**: 메인 멜로디를 제외한 다른 멜로디 연주 · **rL**: 모든 멜로디가 재생되지 않음

DEMO(데모송)

- [DEMO] 버튼을 눌러서 연주시작/정지(반복재생)
- 음악 연주시 [TONE] 버튼을 누르면 임시로 음색선택모드로 진입하며 3초 후 음악선택모드로 돌아갑니다.
- 총 110가지의 데모송이 내장되어 있습니다. (17P 참고)

SPLIT(분할연주)

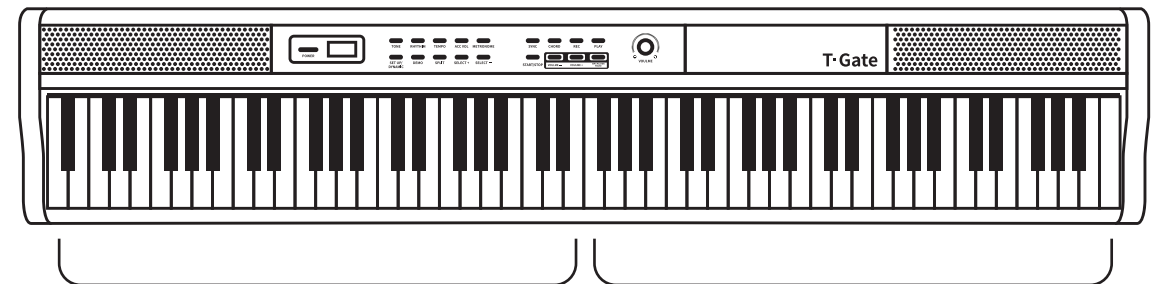

- [SPLIT]버튼을 한번 눌러 분할연주 기능을 ON/OFF
- 분할연주 기능이 사용 중일 때는오른쪽 44건반, 왼쪽 44건반이 사용되어집니다.
- 오른쪽 건반은[SPLIT] 버튼을 누르기전 설정한 음색으로 나오며,
왼쪽 건반의 [SPLIT]을 누른후 설정한 음색으로 나옵니다.

SYNC[자동반주]

- [SYNC]버튼을 누르고 처음 34키를 누르면 선택된 리듬이 자동으로 연주됩니다.
(처음 34키는 왼쪽에서 34번까지의 아무키, 리듬 연주 시 [SYNC]를 누르면 리듬 연주는 중단됩니다.)

CHORD(화음 연주)

- [CHORD]버튼을 누르면 화음 모드ON/OFF, 리듬연주와 일반모드에서만 작동합니다.
- 리듬반주 중 [CHORD]버튼을 누르고 왼쪽에서 34건반 사이의 건반을 누르면 화음이 연주됩니다.
- 운지법은 FINGER CHORD LIST, SINGLE CHORD LIST 를 참고하십시오.(18~22P 참고)
- FINGER CHORD는 rhythm / chord/ sync에서 사용가능합니다.

START/STOP(리듬 연주 시작/정지)

- [START/STOP]버튼을 누르면 리듬 연주를 시작하고 한 번 더 누르면 중단합니다.
- 리듬 연주 시작 시 녹음, 재생, 데모송 연주 등 그 밖의 모드를 중단시킵니다.

REC(연주녹음)

- [REC]버튼을 누르면 메트로놈 소리가 연주됩니다. 이때 연주를 하면 녹음이 시작됩니다.
한번 더 [REC] 누를시 해제됩니다. 마지막 녹음된 음악은 삭제됩니다.
(메트로놈 소리는 녹음되지 않습니다.)
- [RHYTHM] 버튼을 누르고 [START/STOP]버튼을 누르면 반주가 나옵니다 이때 [REC] 버튼을 누르면 메트로놈 소리는 연주되지 않고 반주만 나오는 상태에서 녹음하실 수 있습니다.
- DEMO, SPLIT, METRONOME, MP3는 녹음이 되지 않습니다.

PLAY(녹음 연주시작)

- [PLAY]버튼을 누르면 녹음된 연주가 시작됩니다. 한번더 누르면 재생을 중단합니다.
- [PLAY] 버튼을 누르면 녹음모드를 종료합니다.
- 녹음된 음악이 없는 경우 재생되지 않습니다.

MP3 PLAYER/PAUSE(MP3 음악 재생/정지)

- USB 메모리를 연결시키면 MP3를 재생할 수 있습니다.(외장하드 USB 불가)
- [MP3 PLAY/PAUSE]버튼을 눌러서 재생 또는 일시중지 합니다.
- 재생순서는 최근에 넣은 MP3 곡 순서대로 재생됩니다.

◀◀ VOULME -

- [Volume-] 버튼을 짧게 눌러 이전곡을 선택합니다.
- [Volume-] 버튼을 길게 눌러 MP3 볼륨을 작게 줄입니다.

▶▶ VOULME +

- [Volume+] 버튼을 짧게 눌러 다음곡을 선택합니다.
- [Volume+] 버튼을 길게 눌러 MP3 볼륨을 크게 늘립니다.

VOULME(마스터 볼륨)

- 모든 소리를 크고 작게 제어할 수 있습니다.

RHYTHM List

- | | | | |
|-----------------------|--------------------------|-----------------------|-----------------------|
| 501 Scand Slow Rock | 551 Orchestra Swing1 | 601 Standard Rock2 | 651 80's Pop3 |
| 502 Schlager 6-8 | 552 Orchestra Swing2 | 602 16 Beat Ballad3 | 652 60's Soul2 |
| 503 Schlager Fox | 553 70's Ranking Country | 603 Contemp Rock2 | 653 Fusion Shuffl3 |
| 504 Highland Waltz | 554 Jazz Waltz Med | 604 EP Ballad2 | 654 Fusion Shuffl4 |
| 505 Italian Polka | 555 Mariachi Waltz | 605 Fusion4 | 655 16 Beat Pop3 |
| 506 Grupera | 556 US March | 606 Fusion5 | 656 16 Beat Pop4 |
| 507 Danzon | 557 Guitar Rumba | 607 Funk2 | 657 60's Rock & Roll2 |
| 508 Schlager Alp | 558 Slow Blues | 608 Guitar Serenade2 | 658 Brit Rock Pop2 |
| 509 Saeidy | 559 Jazz Waltz Fast | 609 Organ Ballad3 | 659 Blueberry Blues2 |
| 510 Bhajan | 560 70's Country Pop | 610 Joropo2 | 660 Skiffle3 |
| 511 Hip Hop Groove | 561 Dixieland | 611 Reggaeton2 | 661 Mambo6 |
| 512 Chart Pop1 | 562 40's Big Band | 612 French Waltz2 | 662 Mambo7 |
| 513 Organ Groove | 563 Easy Country | 613 Merengue2 | 663 Club Pop3 |
| 514 Chart Pop2 | 564 Country Hits | 614 Pop Ballad2 | 664 Schlager Italia2 |
| 515 New R&B | 565 Country 8 Beat | 615 Norteno2 | 665 Power Rock3 |
| 516 Pop R&B | 566 Sci-fi March | 616 Jig2 | 666 Rock'n Roll 3 |
| 517 Chart R&B | 567 Tap Dance Swing | 617 Hawaiian2 | 667 Cool8 Beat2 |
| 518 Modern Shuffle | 568 Orchestral Bolero | 618 70's Disco3 | 668 British Pop3 |
| 519 Blues Rock | 569 Gospel Sisters | 619 70's Disco4 | 669 British Pop4 |
| 520 Dream Dance | 570 Italian Waltz | 620 Club Beat2 | 670 8 Beat Soul3 |
| 521 US Chart Hit | 571 6-8 March | 621 Rap 4 | 671 Brit Pop2 |
| 522 Soul R&B | 572 Bluegrass | 622 Disco House2 | 672 Disco Latin2 |
| 523 R&B Soul Ballad | 573 Mod Cntry Bld1 | 623 MOR Swing2 | 673 Brit Pop Swing2 |
| 524 Euro Hip Hop | 574 Scand Country1 | 624 Retro Pop2 | 674 Fast Gospel2 |
| 525 Trip Hop | 575 Scand Country2 | 625 Calypso2 | 675 Fast Bossa2 |
| 526 Ibiza 2004 | 576 Scand Shuffle | 626 Trance Pop2 | 676 60's Guitar Pop2 |
| 527 Mod Big Band Shfl | 577 Worship Slow | 627 Big Band Shuffle4 | 677 90's Soul |
| 528 Modern Big Band | 578 Disco Teens | 628 Big Band Shuffle5 | 678 Funk Shuffl 3 |
| 529 Pop Gtr Ballad | 579 Scand Bugg | 629 Big Band Shuffle6 | 679 8 Beat Rock3 |
| 530 Ibiza 2002 | 580 Rock Cha Cha | 630 German Rock2 | 680 Rock Cha Cha2 |
| 531 Euro Trance | 581 Organ Swing | 631 Schlager Beat2 | 681 Gujira2 |
| 532 6-8 Trance | 582 Secret Service | 632 Disco Funk2 | 682 Rock Ballad2 |
| 533 Latin DJ's | 583 Animation Bld | 633 Disco Samba2 | 683 Soul2 |
| 534 Bomba | 584 Christmas Waltz | 634 New Hip Hop2 | 684 Classic 8Beat2 |
| 535 Chillout Cafe | 585 Movie Swing | 635 Cat Groove2 | 685 Bolero3 |
| 536 70's Glam Piano | 586 Movie Ballad | 636 Laff2 | 686 Soul Brothers2 |
| 537 French House | 587 Bubblegum Pop | 637 Pop Waltz3 | 687 Happy Reggae2 |
| 538 English Waltz | 588 Rock Shuffle | 638 Bhangra2 | 688 Pop Latin2 |
| 539 8 Beat Ballad1 | 589 West Coast Pop | 639 Twist3 | 689 6-8Slow Rock2 |
| 540 Club House | 590 Classic 16 Beat | 640 German March2 | 690 6-8 Modern2 |
| 541 House2 | 591 Jazz Pop | 641 Enka2 | 691 6-8 Orchestral2 |
| 542 Jazz Gtr Club | 592 Kool Shuffle | 642 Bolero Lento2 | 692 Slow Soul2 |
| 543 Modern Jazz | 593 8 Beat Ballad2 | 643 Midnight Swing2 | 693 Piano Ballad3 |
| 544 Acoustic Jazz | 594 Chillout | 644 French Jazz2 | 694 Disco Trot2 |
| 545 Cool Jazz Ballad | 595 16 Beat Ballad1 | 645 Latin Party Pop2 | 695 Disco Hands2 |
| 546 Modern Jazz Bld | 596 Epic Ballad | 646 Tango6 | 696 UK Pop2 |
| 547 Easy Listening | 597 Easy Ballad | 647 Tango7 | 697 Italian Mazurka2 |
| 548 Bebop | 598 Cuban Son | 648 Parranda2 | 698 Bohemian Waltz2 |
| 549 Orch Big Band1 | 599 Bachata2 | 649 Latin Rock2 | 699 Samba3 |
| 550 Big Band Fast1 | 600 Forro | 650 Acoustic Rock3 | 700 Samba4 |

RHYTHM List

251 Tango2	301 Fusion Shuffl 1	351 Hully Gully	401 J-Pop Hit	451 Detroit Pop1
252 Tango3	302 Fusion Shuffl 2	352 Tarantella	402 16 Beat Ballad2	452 Detroit Pop2
253 German Waltz	303 Club Pop1	353 Limbo Rock	403 70's Pop Ballad	453 Worship Med
254 Carnival	304 Club Pop2	354 Swing Waltz	404 EP Ballad	454 Worship Fast
255 Organ Samba	305 16 Beat Pop1	355 Pub Piano	405 Power Ballad	455 Piano Boogie
256 Reel	306 16 Beat Pop2	356 Jazz Waltz2	406 Guitar Ballad2	456 Lovely Shuffle
257 Gay Gordons	307 8 Beat Pop1	357 Jazz Waltz3	407 New R&B Ballad	457 60's Rock & Roll
258 Scand Waltz	308 8 Beat Pop2	358 Show Tune	408 Guitar Serenade	458 Kool Funk
259 60's RockN	309 8 Beat Soul1	359 Polka2	409 Organ Ballad2	459 Blueberry Blues
260 Standard Rock	310 8 Beat Soul2	360 Ober Polka	410 Joropo	460 Shuffle Blues
261 Brit Rock Pop	311 8 Beat Rock1	361 Party Polka	411 Reggaeton	461 Mambo 4
262 60's Vintage Rock	312 8 Beat Rock2	362 Pop Mambo	412 French Waltz	462 Mambo 5
263 Chart Rock Shfl	313 Classic 8Beat	363 Latin Party Pop	413 Merengue	463 Pop Classics
264 60's Pop Rock	314 Vintage Gtr Pop	364 Cumbia2	414 12-8 Ballad	464 Live 8 Beat
265 Rock Billy	315 Schlager Italia	365 Parranda	415 Norteno	465 Power Rock2
266 Rock Boogie	316 70's Disco1	366 Carnival2	416 Jig	466 Acoustic Rock2
267 Rock Cha Cha	317 70's Disco2	367 BossaNova2	417 Hawaiian	467 Cool 8 Beat
268 Rock Classical	318 Funky Disco	368 Mambo 2	418 Electronica	468 Uptempo 8Beat
269 Rock Shuffle	319 Saturday Night	369 Mambo 3	419 Funky House	469 90's Rock Ballad
270 Rock Pop	320 Club Latin	370 Bolero2	420 Club Beat	470 Chart Rock Shfl2
271 Rock'n Roll 1	321 Disco Chocolate	371 Cumbia3	421 Retro Club	471 Brit Pop
272 Rock'n Roll 2	322 Disco Fox	372 Latin Rock	422 Mod Chart Pop	472 Brazilian Samba
273 Straight Rock	323 Disco Funk	373 Disco Latin	423 MOR Swing	473 Brit Pop Swing
274 Jazz Rock2	324 Disco Hands	374 Tijuana	424 Retro Pop	474 60's 8 Beat
275 Fast Gospel	325 Disco Party	375 Reggae2	425 Rumba Flamenco	475 Fast Bossa
276 Folk Rock2	326 Disco Samba	376 Salsa2	426 Trance Pop	476 60's Guitar Pop
277 Skiffle	327 UK Pop	377 Calypso	427 Orch Big Band2	477 70's 8 Beat
278 Funk Pop Rock	328 Club Dance	378 Guad Dance	428 Big Band Fast2	478 90's Guitar Pop
279 Contemp Rock	329 Modern R&B	379 Reggae 12Beat	429 Midnight Swing	479 Soft Rock2
280 Acoustic Rock	330 Hip Shuffle	380 Reggae 16Beat	430 German Rock	480 Chart Guita rPop
281 50's Pop2	331 Charleston	381 Swing Fox	431 Schlager Beat	481 Guijira
282 Cool Pop	332 Disco Pop	382 Slow Fox	432 Mellow Hip Hop	482 Modern Pop Bld
283 Groovy Pop	333 Disco Soul	383 Organ Cha Cha	433 Classic Hip Hop	483 Soul
284 60's Vintage Pop	334 Disco Trot	384 Organ Quick Step	434 New Hip Hop	484 Skiffle2
285 80's Pop2	335 Euro Beat2	385 Cat Groove	435 Duranguense	485 6-8Soul
286 Rap Pop	336 Rap 3	386 Dixie Jazz	436 Laff	486 Soul Brothers
287 Pop Rock 3	337 Rave	387 Medium Jazz	437 Ober Walzer	487 Happy Reggae
288 60's Soul	338 Techno2	388 Jazz Big Band	438 Bhangra	488 Pop Latin
289 70's Soul	339 Techno3	389 Jazz Club	439 Zouk	489 6-8Slow Rock
290 Funk	340 70's Disco Funk	390 Ragtime2	440 German March	490 6-8 Modern
291 16 Beat Shuffle	341 Disco Philly	391 Big Band Shuffle 1	441 Enka	491 6-8 Orchestral
292 Twist2	342 Disco House	392 Big Band Shuffle 2	442 Bolero Lento	492 Schlager Shuffle
293 British Pop1	343 80's Disco	393 Big Band Shuffle 3	443 Sherif fReggae	493 Schlager Pop
294 British Pop2	344 Schlager Polka	394 Fast Band 1	444 Beguine2	494 Schlager Rumba
295 Hard Rock1	345 Polka Pop	395 Fast Band 2	445 Latin Disco	495 Euro Pop Organ
296 Hard Rock2	346 Blue Grass 1	396 Frankly Soul	446 Tango4	496 70's French Hit
297 Fusion2	347 Blue Grass 2	397 Jazz Funk	447 Tango5	497 Italian Mazurka
298 Fusion3	348 Blue Grass 3	398 Classic Big Band	448 Rock & Roll	498 Bohemian Waltz
299 Funk Shuffl 1	349 Pop Waltz2	399 French Jazz	449 Rock & Roll Shfl	499 Schlager Samba1
300 Funk Shuffl 2	350 USA March	400 Jump Jive	450 Oldies R & R	500 Schlager Samba2

TONE List

001 Acoustic Grand Piano	051 Synth Strings 1	101 FX 5 (brightness)
002 Bright Acoustic Piano	052 Synth Strings 2	102 FX 6 (goblins)
003 Electric Grand Piano	053 Choir Aahs	103 FX 7 (echoes)
004 Honky-tonk Piano	054 Voice Oohs	104 FX 8 (sci-fi)
005 Rhodes Piano	055 Synth Voice	105 Sitar
006 Chorused Piano	056 Orchestra Hit	106 Banjo
007 Harpsichord	057 Trumpet	107 Shamisen
008 Clavichord	058 Trombone	108 Koto
009 Celesta	059 Tuba	109 Kalimba
010 Glockenspiel	060 Muted Trumpet	110 Bagpipe
011 Music box	061 French Horn	111 Fiddle
012 Vibraphone	062 Brass Section	112 Shanai
013 Marimba	063 Synth Brass 1	113 Tinkle Bell
014 Xylophone	064 Synth Brass 2	114 Agogo
015 Tubular Bell	065 Soprano Sax	115 Steel Drums
016 Dulcimer	066 Alto Sax	116 Woodblock
017 Drawbar Organ	067 Tenor Sax	117 Taiko Drum
018 Percussive Organ	068 Baritone Sax	118 Melodic Tom
019 Rock Organ	069 Oboe	119 Synth Drum
020 Church Organ	070 English Horn	120 Reverse Cymbal
021 Reed Organ	071 Bassoon	121 Guitar Fret Noise
022 Accordion	072 Clarinet	122 Breath Noise
023 Harmonica	073 Piccolo	123 Seashore
024 Tango Accordion	074 Flute	124 Bird Tweet
025 Acoustic Guitar (nylon)	075 Recorder	125 Telephone Ring
026 Acoustic Guitar (steel)	076 Pan Flute	126 Helicopter
027 Electric Guitar (jazz)	077 Bottle Blow	127 Applause
028 Electric Guitar (clean)	078 Shakuhachi	128 Gunshot
029 Electric Guitar (muted)	079 Whistle	129 Acoustic Grand Piano 1
030 Overdriven Guitar	080 Ocarina	130 Bright Acoustic Piano 1
031 Distortion Guitar	081 Lead 1 (square)	131 Electric Grand Piano 1
032 Guitar Harmonics	082 Lead 2 (sawtooth)	132 Honky-tonk Piano 1
033 Acoustic Bass	083 Lead 3 (calliope lead)	133 Rhodes Piano 1
034 Electric Bass(finger)	084 Lead 4 (chiff lead)	134 Chorused Piano 1
035 Electric Bass (pick)	085 Lead 5 (charang)	135 Harpsichord 1
036 Fretless Bass	086 Lead 6 (voice)	136 Clavichord 1
037 Slap Bass 1	087 Lead 7 (fifths)	137 Celesta 1
038 Slap Bass 2	088 Lead 8 (bass+lead)	138 Glockenspiel 1
039 Synth Bass 1	089 Pad 1 (new age)	139 Music box 1
040 Synth Bass 2	090 Pad 2 (warm)	140 Vibraphone 1
041 Violin	091 Pad 3 (polysynth)	141 Marimba 1
042 Viola	092 Pad 4 (choir)	142 Xylophone 1
043 Cello	093 Pad 5 (bowed)	143 Tubular Bell 1
044 Contrabass	094 Pad 6 (metallic)	144 Dulcimer 1
045 Tremolo Strings	095 Pad 7 (halo)	145 Drawbar Organ 1
046 Pizzicato Strings	096 Pad 8 (sweep)	146 Percussive Organ 1
047 Orchestral Harp	097 FX 1 (rain)	147 Rock Organ 1
048 Timpani	098 FX 2 (soundtrack)	148 Church Organ 1
049 String Ensemble 1	099 FX 3 (crystal)	149 Reed Organ 1
050 String Ensemble 2	100 FX 4 (atmosphere)	150 Accordion 1

TONE List

151 Harmonica 1	201 Piccolo 1	251 Seashore 1
152 Tango Accordion 1	202 Flute 1	252 Bird Tweet 1
153 Acoustic Guitar (nylon) 1	203 Recorder 1	253 Telephone Ring 1
154 Acoustic Guitar (steel) 1	204 Pan Flute 1	254 Helicopter 1
155 Electric Guitar (jazz) 1	205 Bottle Blow 1	255 Applause 1
156 Electric Guitar (clean) 1	206 Shakuhachi 1	256 Gunshot 1
157 Electric Guitar (muted) 1	207 Whistle 1	257 Acoustic Grand Piano 2
158 Overdriven Guitar 1	208 Ocarina 1	258 Bright Acoustic Piano 2
159 Distortion Guitar 1	209 Lead 1 (square 1)	259 Electric Grand Piano 2
160 Guitar Harmonics 1	210 Lead 2 (sawtooth 1)	260 Honky-tonk Piano 2
161 Acoustic Bass 1	211 Lead 3 (calliope lead 1)	261 Rhodes Piano 2
162 Electric Bass(finger) 1	212 Lead 4 (chiff lead 1)	262 Chorused Piano 2
163 Electric Bass (pick) 1	213 Lead 5 (charang 1)	263 Harpsichord 2
164 Fretless Bass 1	214 Lead 6 (voice 1)	264 Clavichord 2
165 Slap Bass 3	215 Lead 7 (fifths 1)	265 Celesta 2
166 Slap Bass 4	216 Lead 8 (bass+lead 1)	266 Glockenspiel 2
167 Synth Bass 3	217 Pad 1 (new age 1)	267 Music box 2
168 Synth Bass 4	218 Pad 2 (warm 1)	268 Vibraphone 2
169 Violin 1	219 Pad 3 (polysynth 1)	269 Marimba 2
170 Viola 1	220 Pad 4 (choir 1)	270 Xylophone 2
171 Cello 1	221 Pad 5 (bowed 1)	271 Tubular Bell 2
172 Contrabass 1	222 Pad 6 (metallic 1)	272 Dulcimer 2
173 Tremolo Strings 1	223 Pad 7 (halo 1)	273 Drawbar Organ 2
174 Pizzicato Strings 1	224 Pad 8 (sweep 1)	274 Percussive Organ 2
175 Orchestral Harp 1	225 FX 1 (rain 1)	275 Rock Organ 2
176 Timpani 1	226 FX 2 (soundtrack 1)	276 Church Organ 2
177 String Ensemble 3	227 FX 3 (crystal 1)	277 Reed Organ 2
178 String Ensemble 4	228 FX 4 (atmosphere 1)	278 Accordion 2
179 Synth Strings 3	229 FX 5 (brightness 1)	279 Harmonica 2
180 Synth Strings 4	230 FX 6 (goblins 1)	280 Tango Accordion 2
181 Choir Aahs 1	231 FX 7 (echoes 1)	281 Acoustic Guitar (nylon) 2
182 Voice Oohs 1	232 FX 8 (sci-fi 1)	282 Acoustic Guitar (steel) 2
183 Synth Voice 1	233 Sitar 1	283 Electric Guitar (jazz) 2
184 Orchestra Hit 1	234 Banjo 1	284 Electric Guitar (clean) 2
185 Trumpet 1	235 Shamisen 1	285 Electric Guitar (muted) 2
186 Trombone 1	236 Koto 1	286 Overdriven Guitar 2
187 Tuba 1	237 Kalimba 1	287 Distortion Guitar 2
188 Muted Trumpet 1	238 Bagpipe 1	288 Guitar Harmonics 2
189 French Horn 1	239 Fiddle 1	289 Acoustic Bass 2
190 Brass Section 1	240 Shanai 1	290 Electric Bass(finger) 2
191 Synth Brass 3	241 Tinkle Bell 1	291 Electric Bass (pick) 2
192 Synth Brass 4	242 Agogo 1	292 Fretless Bass 2
193 Soprano Sax 1	243 Steel Drums 1	293 Slap Bass 5
194 Alto Sax 1	244 Woodblock 1	294 Slap Bass 6
195 Tenor Sax 1	245 Taiko Drum 1	295 Synth Bass 5
196 Baritone Sax 1	246 Melodic Tom 1	296 Synth Bass 6
197 Oboe 1	247 Synth Drum 1	297 Violin 2
198 English Horn 1	248 Reverse Cymbal 1	298 Viola 2
199 Bassoon 1	249 Guitar Fret Noise 1	299 Cello 2
200 Clarinet 1	250 Breath Noise 1	300 Contrabass 2

RHYTHM List

001 8Beat 1	051 50's Pop	101 Groove 5	151 Jazz 1	201 70's Chart Ballad
002 8Beat 2	052 80's Pop	102 Groove 6	152 Jazz 2	202 Romantic Ballad
003 8Beat 3	053 Rock 1	103 Groove 7	153 Jazz Waltz	203 90's Cool Ballad
004 8Beat 4	054 Rock 2	104 Groove 8	154 Jazz Ballad	204 Alp Ballad1
005 8Beat 5	055 Rock 3	105 Groove 9	155 Lounge	205 Alp Ballad2
006 8Beat 6	056 Rock 4	106 Piano 1	156 Jive	206 E_Ballad
007 8Beat 7	057 50's Rock	107 Piano 2	157 Ragtime	207 Unplugged 9
008 8Beat 8	058 60's Rock 1	108 Piano 3	158 Charlston	208 Pop Ballad
009 8Beat 9	059 60's Rock 2	109 Piano 4	159 Big Band	209 Pop New Age
010 8Beat 10	060 70's Rock	110 Piano 5	160 Swing	210 8 Beat Modern
011 8Beat 11	061 80's Rock	111 Piano 6	161 Caribbean	211 Country Ballad1
012 8Beat 12	062 Big Rock	112 Piano 7	162 Reggae	212 Love Song
013 8Beat 13	063 Power Rock	113 Piano 8	163 Cha Cha	213 Modern Country Pop
014 8Beat 14	064 Dark Rock	114 Piano 9	164 Rumba	214 Electro Pop
015 8Beat 15	065 Jazz Rock	115 Piano 10	165 Samba	215 Acoustic Ballad 2
016 8Beat 16	066 Soft Rock	116 Unplugged 1	166 BossaNova	216 Piano Ballad 1
017 8Beat 17	067 Pop Rock 1	117 Unplugged 2	167 Mambo	217 R&B Ballad
018 8Beat 18	068 Pop Rock 2	118 Unplugged 3	168 Salsa	218 Rock Ballad
019 16Beat 1	069 Funky Rock 1	119 Unplugged 4	169 Beguine	219 Slow & Easy
020 16Beat 2	070 Funky Rock 2	120 Unplugged 5	170 Cumbia	220 Analog Ballad
021 16Beat 3	071 Ballad Rock	121 Unplugged 6	171 Latin	221 Slow Rock 5
022 16Beat 4	072 Folk Rock	122 Unplugged 7	172 Baroque	222 Slow Rock 6
023 16Beat 5	073 Slow Rock 1	123 Unplugged 8	173 Bolero	223 Slow Rock 7
024 16Beat 6	074 Slow Rock 2	124 Dance 1	174 Holly Wood	224 Slow Soul
025 16Beat 7	075 Slow Rock 3	125 Dance 2	175 Foxtrot	225 8 Beat Adria
026 16Beat 8	076 Slow Rock 4	126 Disco	176 Paso Doble	226 Classic Piano
027 Pop 1	077 Rock&Roll 1	127 House	177 Quick Step	227 80's EP Ballad
028 Pop 2	078 Rock&Roll 2	128 Euro Beat	178 Bachata	228 80's Boy Band
029 Pop 3	079 Shuffle 1	129 Funky Dance	179 Boston	229 Country Ballad2
030 Pop 4	080 Shuffle 2	130 80's Dance	180 Tango	230 Country Two Step
031 Pop 5	081 Boogie 1	131 Techno	181 Waltz	231 Country 6
032 Pop 6	082 Boogie 2	132 Fusion	182 March	232 Country 7
033 Pop 7	083 Boogie 3	133 Blues 1	183 Polka	233 Finger Pickin
034 Pop 8	084 Twist	134 Blues 2	184 Classical 1	234 Country Brothers
035 Pop 9	085 Ballad 1	135 Blues 3	185 Classical 2	235 New Country
036 Pop 10	086 Ballad 2	136 Funky 1	186 China Folk 1	236 Easy Country
037 Pop 11	087 Ballad 3	137 Funky 2	187 China Folk 2	237 70's Chart Cntry
038 Pop 12	088 Ballad 4	138 Funky 3	188 China Opera 1	238 Hoedown
039 Pop 13	089 Ballad 5	139 Gospel	189 China Opera 2	239 Country Shuffle
040 Pop 14	090 Soul Ballad	140 Rap 1	190 China Ballad	240 Waltz2
041 Pop Bolero	091 6/8 Ballad	141 Rap 2	191 China Pop	241 Cha Cha2
042 Pop BossaNova	092 Acoustic Ballad	142 Soul 1	192 Xin Jiang	242 Rumba2
043 Pop Waltz	093 Colour Ballad	143 Soul 2	193 Shan Bei	243 Jive2
044 Pop Dance	094 Guitar Ballad	144 Soul 3	194 Yun Nan	244 Pasodoble
045 Motown	095 Piano Ballad	145 Soul 4	195 He Nan	245 Samba1
046 British Pop 1	096 Organ Ballad	146 Country 1	196 An Hui	246 Samba2
047 British Pop 2	097 Groove 1	147 Country 2	197 Guang Dong	247 Schlager Rock 1
048 British Pop 3	098 Groove 2	148 Country 3	198 Xi Zang	248 Schlager Rock 2
049 Guitar Pop	099 Groove 3	149 Country 4	199 Mongolian	249 Foxtrot2
050 Slow Pop	100 Groove 4	150 Country 5	200 Korean	250 Viennese Waltz

TONE List

751 Fiddle 5	801 Acoustic Bass 6	851 Lead 3 (calliope lead 6)
752 Shanai 5	802 Electric Bass(finger) 6	852 Lead 4 (chiff lead 6)
753 Tinkle Bell 5	803 Electric Bass (pick) 6	853 Lead 5 (charang 6)
754 Agogo 5	804 Fretless Bass 6	854 Lead 6 (voice 6)
755 Steel Drums 5	805 Slap Bass 13	855 Lead 7 (fifths 6)
756 Woodblock 5	806 Slap Bass 14	856 Lead 8 (bass+lead 6)
757 Taiko Drum 5	807 Synth Bass 13	857 Pad 1 (new age 6)
758 Melodic Tom 5	808 Synth Bass 14	858 Pad 2 (warm 6)
759 Synth Drum 5	809 Violin 6	859 Pad 3 (polysynth 6)
760 Reverse Cymbal 5	810 Viola 6	860 Pad 4 (choir 6)
761 Guitar Fret Noise 5	811 Cello 6	861 Pad 5 (bowed 6)
762 Breath Noise 5	812 Contrabass 6	862 Pad 6 (metallic 6)
763 Seashore 5	813 Tremolo Strings 6	863 Pad 7 (halo 6)
764 Bird Tweet 5	814 Pizzicato Strings 6	864 Pad 8 (sweep 6)
765 Telephone Ring 5	815 Orchestral Harp 6	865 FX 1 (rain 6)
766 Helicopter 5	816 Timpani 6	866 FX 2 (soundtrack 6)
767 Applause 5	817 String Ensemble 13	867 FX 3 (crystal 6)
768 Gunshot 5	818 String Ensemble 14	868 FX 4 (atmosphere 6)
769 Acoustic Grand Piano 6	819 Synth Strings 13	869 FX 5 (brightness 6)
770 Bright Acoustic Piano 6	820 Synth Strings 14	870 FX 6 (goblins 6)
771 Electric Grand Piano 6	821 Choir Aahs 6	871 FX 7 (echoes 6)
772 Honky-tonk Piano 6	822 Voice Oohs 6	872 FX 8 (sci-fi 6)
773 Rhodes Piano 6	823 Synth Voice 6	873 Sitar 6
774 Chorused Piano 6	824 Orchestra Hit 6	874 Banjo 6
775 Harpsichord 6	825 Trumpet 6	875 Shamisen 6
776 Clavichord 6	826 Trombone 6	876 Koto 6
777 Celesta 6	827 Tuba 6	877 Kalimba 6
778 Glockenspiel 6	828 Muted Trumpet 6	878 Bagpipe 6
779 Music box 6	829 French Horn 6	879 Fiddle 6
780 Vibraphone 6	830 Brass Section 6	880 Shanai 6
781 Marimba 6	831 Synth Brass 13	881 Tinkle Bell 6
782 Xylophone 6	832 Synth Brass 14	882 Agogo 6
783 Tubular Bell 6	833 Soprano Sax 6	883 Steel Drums 6
784 Dulcimer 6	834 Alto Sax 6	884 Woodblock 6
785 Drawbar Organ 6	835 Tenor Sax 6	885 Taiko Drum 6
786 Percussive Organ 6	836 Baritone Sax 6	886 Melodic Tom 6
787 Rock Organ 6	837 Oboe 6	887 Synth Drum 6
788 Church Organ 6	838 English Horn 6	888 Reverse Cymbal 6
789 Reed Organ 6	839 Bassoon 6	889 Guitar Fret Noise 6
790 Accordion 6	840 Clarinet 6	890 Breath Noise 6
791 Harmonica 6	841 Piccolo 6	891 Seashore 6
792 Tango Accordion 6	842 Flute 6	892 Bird Tweet 6
793 Acoustic Guitar (nylon) 6	843 Recorder 6	893 Telephone Ring 6
794 Acoustic Guitar (steel) 6	844 Pan Flute 6	894 Helicopter 6
795 Electric Guitar (jazz) 6	845 Bottle Blow 6	895 Applause 6
796 Electric Guitar (clean) 6	846 Shakuhachi 6	896 Gunshot 6
797 Electric Guitar (muted) 6	847 Whistle 6	897 Acoustic Grand Piano 7
798 Overdriven Guitar 6	848 Ocarina 6	898 Bright Acoustic Piano 7
799 Distortion Guitar 6	849 Lead 1 (square 6)	899 Electric Grand Piano 7
800 Guitar Harmonics 6	850 Lead 2 (sawtooth 6)	900 Honky-tonk Piano 7

TONE List

301 Tremolo Strings 2	351 Pad 7 (halo 2)	401 Drawbar Organ 3
302 Pizzicato Strings 2	352 Pad 8 (sweep 2)	402 Percussive Organ 3
303 Orchestral Harp 2	353 FX 1 (rain 2)	403 Rock Organ 3
304 Timpani 2	354 FX 2 (soundtrack 2)	404 Church Organ 3
305 String Ensemble 5	355 FX 3 (crystal 2)	405 Reed Organ 3
306 String Ensemble 6	356 FX 4 (atmosphere 2)	406 Accordion 3
307 Synth Strings 5	357 FX 5 (brightness 2)	407 Harmonica 3
308 Synth Strings 6	358 FX 6 (goblins 2)	408 Tango Accordion 3
309 Choir Aahs 2	359 FX 7 (echoes 2)	409 Acoustic Guitar (nylon) 3
310 Voice Oohs 2	360 FX 8 (sci-fi 2)	410 Acoustic Guitar (steel) 3
311 Synth Voice 2	361 Sitar 2	411 Electric Guitar (jazz) 3
312 Orchestra Hit 2	362 Banjo 2	412 Electric Guitar (clean) 3
313 Trumpet 2	363 Shamisen 2	413 Electric Guitar (muted) 3
314 Trombone 2	364 Koto 2	414 Overdriven Guitar 3
315 Tuba 2	365 Kalimba 2	415 Distortion Guitar 3
316 Muted Trumpet 2	366 Bagpipe 2	416 Guitar Harmonics 3
317 French Horn 2	367 Fiddle 2	417 Acoustic Bass 3
318 Brass Section 2	368 Shanai 2	418 Electric Bass(finger) 3
319 Synth Brass 5	369 Tinkle Bell 2	419 Electric Bass (pick) 3
320 Synth Brass 6	370 Agogo 2	420 Fretless Bass 3
321 Soprano Sax 2	371 Steel Drums 2	421 Slap Bass 7
322 Alto Sax 2	372 Woodblock 2	422 Slap Bass 8
323 Tenor Sax 2	373 Taiko Drum 2	423 Synth Bass 7
324 Baritone Sax 2	374 Melodic Tom 2	424 Synth Bass 8
325 Oboe 2	375 Synth Drum 2	425 Violin 3
326 English Horn 2	376 Reverse Cymbal 2	426 Viola 3
327 Bassoon 2	377 Guitar Fret Noise 2	427 Cello 3
328 Clarinet 2	378 Breath Noise 2	428 Contrabass 3
329 Piccolo 2	379 Seashore 2	429 Tremolo Strings 3
330 Flute 2	380 Bird Tweet 2	430 Pizzicato Strings 3
331 Recorder 2	381 Telephone Ring 2	431 Orchestral Harp 3
332 Pan Flute 2	382 Helicopter 2	432 Timpani 3
333 Bottle Blow 2	383 Applause 2	433 String Ensemble 7
334 Shakuhachi 2	384 Gunshot 2	434 String Ensemble 8
335 Whistle 2	385 Acoustic Grand Piano 3	435 Synth Strings 7
336 Ocarina 2	386 Bright Acoustic Piano 3	436 Synth Strings 8
337 Lead 1 (square 2)	387 Electric Grand Piano 3	437 Choir Aahs 3
338 Lead 2 (sawtooth 2)	388 Honky-tonk Piano 3	438 Voice Oohs 3
339 Lead 3 (calliope lead 2)	389 Rhodes Piano 3	439 Synth Voice 3
340 Lead 4 (chiff lead 2)	390 Chorused Piano 3	440 Orchestra Hit 3
341 Lead 5 (charang 2)	391 Harpsichord 3	441 Trumpet 3
342 Lead 6 (voice 2)	392 Clavichord 3	442 Trombone 3
343 Lead 7 (fifths 2)	393 Celesta 3	443 Tuba 3
344 Lead 8 (bass+lead 2)	394 Glockenspiel 3	444 Muted Trumpet 3
345 Pad 1 (new age 2)	395 Music box 3	445 French Horn 3
346 Pad 2 (warm 2)	396 Vibraphone 3	446 Brass Section 3
347 Pad 3 (polysynth 2)	397 Marimba 3	447 Synth Brass 7
348 Pad 4 (choir 2)	398 Xylophone 3	448 Synth Brass 8
349 Pad 5 (bowed 2)	399 Tubular Bell 3	449 Soprano Sax 3
350 Pad 6 (metallic 2)	400 Dulcimer 3	450 Alto Sax 3

TONE List

451 Tenor Sax 3	501 Taiko Drum 3	551 Synth Bass 9
452 Baritone Sax 3	502 Melodic Tom 3	552 Synth Bass 10
453 Oboe 3	503 Synth Drum 3	553 Violin 4
454 English Horn 3	504 Reverse Cymbal 3	554 Viola 4
455 Bassoon 3	505 Guitar Fret Noise 3	555 Cello 4
456 Clarinet 3	506 Breath Noise 3	556 Contrabass 4
457 Piccolo 3	507 Seashore 3	557 Tremolo Strings 4
458 Flute 3	508 Bird Tweet 3	558 Pizzicato Strings 4
459 Recorder 3	509 Telephone Ring 3	559 Orchestral Harp 4
460 Pan Flute 3	510 Helicopter 3	560 Timpani 4
461 Bottle Blow 3	511 Applause 3	561 String Ensemble 9
462 Shakuhachi 3	512 Gunshot 3	562 String Ensemble 10
463 Whistle 3	513 Acoustic Grand Piano 4	563 Synth Strings 9
464 Ocarina 3	514 Bright Acoustic Piano 4	564 Synth Strings 10
465 Lead 1 (square 3)	515 Electric Grand Piano 4	565 Choir Aahs 4
466 Lead 2 (sawtooth 3)	516 Honky-tonk Piano 4	566 Voice Oohs 4
467 Lead 3 (calliope lead 3)	517 Rhodes Piano 4	567 Synth Voice 4
468 Lead 4 (chiff lead 3)	518 Chorused Piano 4	568 Orchestra Hit 4
469 Lead 5 (charang 3)	519 Harpsichord 4	569 Trumpet 4
470 Lead 6 (voice 3)	520 Clavichord 4	570 Trombone 4
471 Lead 7 (fifths 3)	521 Celesta 4	571 Tuba 4
472 Lead 8 (bass+lead 3)	522 Glockenspiel 4	572 Muted Trumpet 4
473 Pad 1 (new age 3)	523 Music box 4	573 French Horn 4
474 Pad 2 (warm 3)	524 Vibraphone 4	574 Brass Section 4
475 Pad 3 (polysynth 3)	525 Marimba 4	575 Synth Brass 9
476 Pad 4 (choir 3)	526 Xylophone 4	576 Synth Brass 10
477 Pad 5 (bowed 3)	527 Tubular Bell 4	577 Soprano Sax 4
478 Pad 6 (metallic 3)	528 Dulcimer 4	578 Alto Sax 4
479 Pad 7 (halo 3)	529 Drawbar Organ 4	579 Tenor Sax 4
480 Pad 8 (sweep 3)	530 Percussive Organ 4	580 Baritone Sax 4
481 FX 1 (rain 3)	531 Rock Organ 4	581 Oboe 4
482 FX 2 (soundtrack 3)	532 Church Organ 4	582 English Horn 4
483 FX 3 (crystal 3)	533 Reed Organ 4	583 Bassoon 4
484 FX 4 (atmosphere 3)	534 Accordion 4	584 Clarinet 4
485 FX 5 (brightness 3)	535 Harmonica 4	585 Piccolo 4
486 FX 6 (goblins 3)	536 Tango Accordion 4	586 Flute 4
487 FX 7 (echoes 3)	537 Acoustic Guitar (nylon) 4	587 Recorder 4
488 FX 8 (sci-fi 3)	538 Acoustic Guitar (steel) 4	588 Pan Flute 4
489 Sitar 3	539 Electric Guitar (jazz) 4	589 Bottle Blow 4
490 Banjo 3	540 Electric Guitar (clean) 4	590 Shakuhachi 4
491 Shamisen 3	541 Electric Guitar (muted) 4	591 Whistle 4
492 Koto 3	542 Overdriven Guitar 4	592 Ocarina 4
493 Kalimba 3	543 Distortion Guitar 4	593 Lead 1 (square 4)
494 Bagpipe 3	544 Guitar Harmonics 4	594 Lead 2 (sawtooth 4)
495 Fiddle 3	545 Acoustic Bass 4	595 Lead 3 (calliope lead 4)
496 Shanai 3	546 Electric Bass(finger) 4	596 Lead 4 (chiff lead 4)
497 Tinkle Bell 3	547 Electric Bass (pick) 4	597 Lead 5 (charang 4)
498 Agogo 3	548 Fretless Bass 4	598 Lead 6 (voice 4)
499 Steel Drums 3	549 Slap Bass 9	599 Lead 7 (fifths 4)
500 Woodblock 3	550 Slap Bass 10	600 Lead 8 (bass+lead 4)

TONE List

601 Pad 1 (new age 4)	651 Music box 5	701 French Horn 5
602 Pad 2 (warm 4)	652 Vibraphone 5	702 Brass Section 5
603 Pad 3 (polysynth 4)	653 Marimba 5	703 Synth Brass 11
604 Pad 4 (choir 4)	654 Xylophone 5	704 Synth Brass 12
605 Pad 5 (bowed 4)	655 Tubular Bell 5	705 Soprano Sax 5
606 Pad 6 (metallic 4)	656 Dulcimer 5	706 Alto Sax 5
607 Pad 7 (halo 4)	657 Drawbar Organ 5	707 Tenor Sax 5
608 Pad 8 (sweep 4)	658 Percussive Organ 5	708 Baritone Sax 5
609 FX 1 (rain 4)	659 Rock Organ 5	709 Oboe 5
610 FX 2 (soundtrack 4)	660 Church Organ 5	710 English Horn 5
611 FX 3 (crystal 4)	661 Reed Organ 5	711 Bassoon 5
612 FX 4 (atmosphere 4)	662 Accordion 5	712 Clarinet 5
613 FX 5 (brightness 4)	663 Harmonica 5	713 Piccolo 5
614 FX 6 (goblins 4)	664 Tango Accordion 5	714 Flute 5
615 FX 7 (echoes 4)	665 Acoustic Guitar (nylon) 5	715 Recorder 5
616 FX 8 (sci-fi 4)	666 Acoustic Guitar (steel) 5	716 Pan Flute 5
617 Sitar 4	667 Electric Guitar (jazz) 5	717 Bottle Blow 5
618 Banjo 4	668 Electric Guitar (clean) 5	718 Shakuhachi 5
619 Shamisen 4	669 Electric Guitar (muted) 5	719 Whistle 5
620 Koto 4	670 Overdriven Guitar 5	720 Ocarina 5
621 Kalimba 4	671 Distortion Guitar 5	721 Lead 1 (square 5)
622 Bagpipe 4	672 Guitar Harmonics 5	722 Lead 2 (sawtooth 5)
623 Fiddle 4	673 Acoustic Bass 5	723 Lead 3 (calliope lead 5)
624 Shanai 4	674 Electric Bass(finger) 5	724 Lead 4 (chiff lead 5)
625 Tinkle Bell 4	675 Electric Bass (pick) 5	725 Lead 5 (charang 5)
626 Agogo 4	676 Fretless Bass 5	726 Lead 6 (voice 5)
627 Steel Drums 4	677 Slap Bass 11	727 Lead 7 (fifths 5)
628 Woodblock 4	678 Slap Bass 12	728 Lead 8 (bass+lead 5)
629 Taiko Drum 4	679 Synth Bass 11	729 Pad 1 (new age 5)
630 Melodic Tom 4	680 Synth Bass 12	730 Pad 2 (warm 5)
631 Synth Drum 4	681 Violin 5	731 Pad 3 (polysynth 5)
632 Reverse Cymbal 4	682 Viola 5	732 Pad 4 (choir 5)
633 Guitar Fret Noise 4	683 Cello 5	733 Pad 5 (bowed 5)
634 Breath Noise 4	684 Contrabass 5	734 Pad 6 (metallic 5)
635 Seashore 4	685 Tremolo Strings 5	735 Pad 7 (halo 5)
636 Bird Tweet 4	686 Pizzicato Strings 5	736 Pad 8 (sweep 5)
637 Telephone Ring 4	687 Orchestral Harp 5	737 FX 1 (rain 5)
638 Helicopter 4	688 Timpani 5	738 FX 2 (soundtrack 5)
639 Applause 4	689 String Ensemble 11	739 FX 3 (crystal 5)
640 Gunshot 4	690 String Ensemble 12	740 FX 4 (atmosphere 5)
641 Acoustic Grand Piano 5	691 Synth Strings 11	741 FX 5 (brightness 5)
642 Bright Acoustic Piano 5	692 Synth Strings 12	742 FX 6 (goblins 5)
643 Electric Grand Piano 5	693 Choir Aahs 5	743 FX 7 (echoes 5)
644 Honky-tonk Piano 5	694 Voice Oohs 5	744 FX 8 (sci-fi 5)
645 Rhodes Piano 5	695 Synth Voice 5	745 Sitar 5
646 Chorused Piano 5	696 Orchestra Hit 5	746 Banjo 5
647 Harpsichord 5	697 Trumpet 5	747 Shamisen 5
648 Clavichord 5	698 Trombone 5	748 Koto 5
649 Celesta 5	699 Tuba 5	749 Kalimba 5
650 Glockenspiel 5	700 Muted Trumpet 5	750 Bagpipe 5